

Specifications

| | |
|---------------------|--|
| Power Supply | 24VDC Loop-powered 500Ω max. loop impedance Use class 2 power supply only |
| Voltage Measurement | 120V, 150V, 240V, 480V, 500V and 600V |
| Output | 4–20mA Proportional; capped at 24mA max |
| Response Time | 250 ms (to 90% value) |
| Accuracy | < 1% (10-100% of range) |
| Linearity | < 0.5% |
| Loading | < 500 ohm |
| Isolation Voltage | 2500 VAC |
| Frequency Range | 40 Hz – 100Hz |
| Enclosure | UL94 V0 Rated |
| Environmental | -4 to 122 ° F (-20 to 50° C), 0–95% RH Pollution Degree 2 Altitude to 2000 meters |
| Approvals | UL/cUL listed and CE |

For products intended for the EU market, the following is applicable to the CE compliance of the product:

The VTR Series comply with EN 61010-1 CAT III 600Vrms max line-to-neutral measurement category. Use 24 V input power and fuse at 5 amps. Power source overvoltage category I as defined per EN 61010-1.

Warning! Risk of danger

Safe operation can only be guaranteed if the transducer is used for the purpose it has been designed for and within the limits of the technical specifications. When this symbol is used, it means you must consult all documentation to understand the nature of potential hazards and the action required to avoid them.



Warning! Risk of electrical shock

When operating the transducer, certain parts of the module may carry hazardous live voltage (e.g. primary conductor, power supply). The transducer should not be put into operation if the installation is not complete.



Model Number Key

VTR 1 - 420 - 24L - DIN

CASE STYLE:
DIN - DIN rail compatible

POWER SUPPLY:
24L - Nominal 24 VDC Loop Power

OUTPUT:
420 - 4-20mA

VOLTAGE INPUT RANGE:

- 1 - 120V
- 2 - 150V
- 3 - 240V
- 4 - 480V
- 5 - 500V
- 6 - 600V (not UL listed)

SENSOR TYPE:

VTR - AC Voltage Transducers, True RMS Output

Know Your Power



Other NK Technologies Products Include:

AC & DC Current Transducers
AC & DC Current Operated Switches
1φ & 3φ Power Transducers
Current & Potential Transformers (CTs & PTs)



NK Technologies



INSTRUCTIONS



VTR SERIES

**AC Voltage Transducers
Ranges 120 to 600 Volts
4-20mA True RMS Output**

Quick “How To” Guide

1. Ensure correct sensor model was chosen for Input Voltage of application.
2. Mount the sensor to a DIN rail using integrated mounting clip on backside of transducer.
3. Connect input voltage L1 & L2 and output wiring (24V + & -) using up to 14 AWG copper wires, rated 75/90°C. Refer to “Output Wiring” section for loop voltage and impedance recommendations.

Recommend 1/2A, 600V fast acting fuses in the primary circuit.

Description

VTR Series Voltage Transducers are designed to monitor AC voltage and detect conditions where supply voltage is above or below normal. Detecting such conditions helps users to avoid problems commonly associated with voltage irregularities such as motor overheating, damage to drives due to regeneration, loss of phase and the like.

The VTR is available with a 4-20mA “True RMS” output as standard, making them suitable for use in applications where the waveform of the monitored voltage is distorted (e.g., noisy environments, variable speed applications or SCR controlled loads).

Installation

VTR transducers feature a 35mm wide DIN rail compatible enclosure and are typically located in the same environment as motors, contactors, heaters, pull-boxes, and other electrical enclosures.

To mount on DIN rail: Orient transducer so that line voltage terminals L1 and L2 are upright/on top of unit and snap securely onto DIN rail. To remove, insert small screwdriver into depression on top of unit and pry orange mounting tab up until unit dislodges from DIN rail.

To mount using screws: Insert small screwdriver into depression in top of unit and pry orange mounting tab up to reveal mounting hole. Continue to pry tab up until it extends and snaps into place, about 0.25”. Insert screws and mount to back plane or other suitably flat surface.

Line Voltage Wiring Connection


CAUTION: TO AVOID ANY POTENTIAL FOR SHOCK OR SAFETY HAZARD, ENSURE LINE VOLTAGE IS DISCONNECTED AT SOURCE BEFORE WIRING TO UNIT.

Connect input voltage to be monitored to terminals L1 and L2 on transducer using up to 10 AWG copper wires and tighten terminals to 7 inch-pounds torque. For multiple transducer applications on separate phases, ensure all phase relationships between L1 and L2 are consistent.

Fusing of the primary voltage inputs is recommended. Use a 1/2 amp, 600 V rated fast acting fuse.

Output Wiring

Connect control or monitoring wires to the sensor. Use up to 14 AWG copper wire, insulated to 75/90°C and tighten terminals to 7 inch-pounds torque. Be sure the output load or loop power requirements are met (see diagram below).

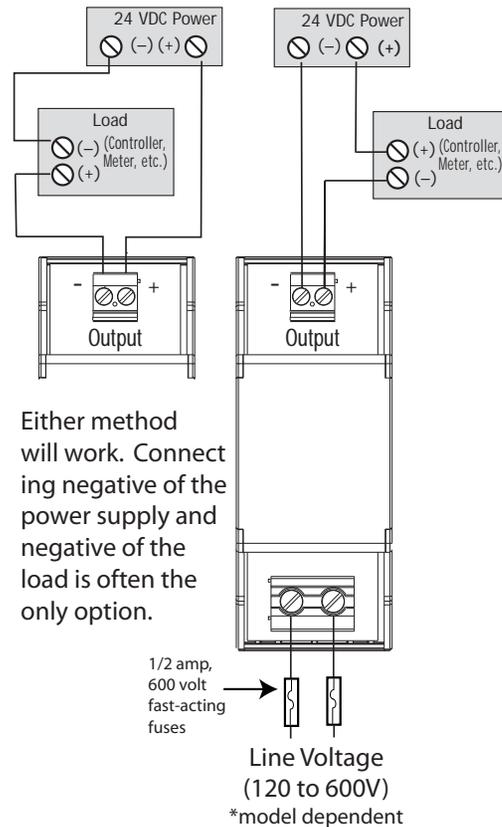


Loop Voltage Requirements:

$$L_V = 12V + (L_R \times 20mA)$$

Where: L_V = Min. Loop voltage
 L_R = Loop Resistance

500 Ω maximum impedance

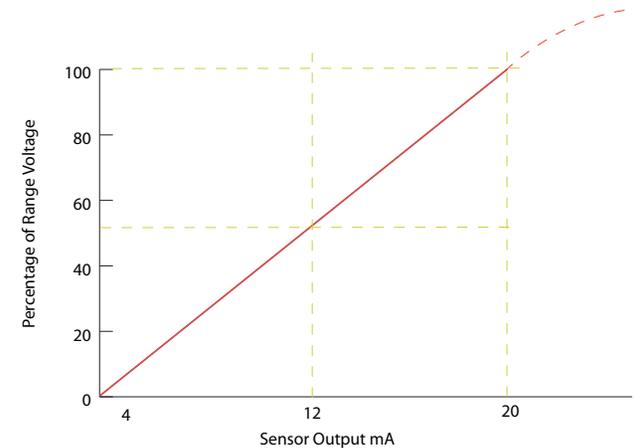

Troubleshooting Tips

1. Transducer has no output

- Power supply is not properly sized. Check power supply voltage and current rating.
- Polarity is not properly matched. Check and correct wiring polarity.

2. Output Signal Too Low or Too High

Transducer model improperly sized for application. Determine the normal operating voltage of your monitored circuit and ensure transducer selected is equal to or slightly higher than the normal operating voltage.

3. Sensor is always at 4mA

Monitored load is not AC or is not on. Check that the monitored load is AC and that it is actually on.